

Ultra-Curb Guard Plus®


Installation Instructions



UltraTech International, Inc.
11542 Davis Creek Court
Jacksonville, FL 32256
800-353-1611
www.StormwaterProducts.com



1. Place one **Anchoring Wedge** on the ends of each section.
2. Connect together two sections of the Curb Guard Plus by inserting the **Male Pipe Connector** into the open end of the **Female Pipe Fitting**. (gluing the sections together using PVC cement is optional)
3. Once the two sections are connected together, slide the **Anchoring Wedge** to cover and seal off the seam area between the two sections.
4. Align the Curb Guard Plus with the **Sediment Flap** facing down (to touch the pavement). This will form a barrier against water flowing underneath the unit and will prevent water/sediment bypass.
5. Install the assembled unit into the "throat" of the curb inlet by pushing each **Anchoring Wedge** down into proper position (Note: The corrugated plastic covered part of the Wedge should face down—toward the ground) . At the ends of the curb inlet, position the **Anchoring Wedges** to seal off the corners.

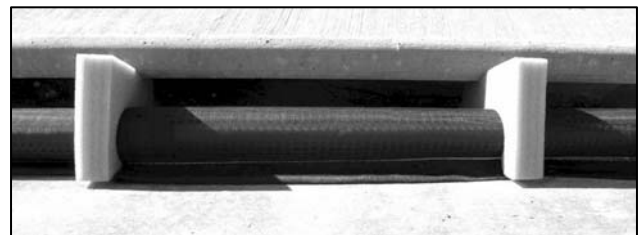

Note: The top of each Anchoring Wedge is perforated. If the Wedge is too large for the inlet, simply tear off the top section and reinstall (a second perforation is available if needed). The front of the Anchoring Wedges should be flush with the face of the inlet.